

**SHOW AIR**

# Mini multi-function air cushion machine User manual

This machine have 3C and CE certification.  
pls read carefully before using

[www.showairpack.com](http://www.showairpack.com)



ShowAir (Beijing) Technology Co.,Ltd  
Logistics Buffer Packaging Solutions





## Product Introduction

Thank you for choosing SHOW AIR Mini multi-function air cushion machine(LPM-05).

This product is one of our company' s self-developed inflator series,small in appearance powerful in function,simple in use,safe and reliable,it has strong compatibility that provides service for many regulations and types of roll;The machine adopts imported original parts,which makes the machine run efficiently and stably and intelligently.According to different types of film roll,the air volume and temperature are adjusted to make the bubble bag fully inflated and sealed firmly.



## Product accessories

machine\*1,power adapter\*1,user manual\*1,warranty card\*1,tool box\*1,heating belt\*2,blade\*1



★The above parts are fragile,please keep them safe.



## Product Parameters

|         |                    |       |        |
|---------|--------------------|-------|--------|
| BRAND   | SHOWAIR            | TYPE  | LPM-05 |
| VOLTAGE | 110V/230V          | POWER | 160W   |
| WEIGHT  | 5kg                | SPEED | 5m/min |
| SIZE    | L240*W230*H210(mm) |       |        |

This air cushion can provide service for these rolls:



Air Cushion



Air Bubble



Air Column 3/5 row








## Product Components

Can be dismantled separately



Fixting film

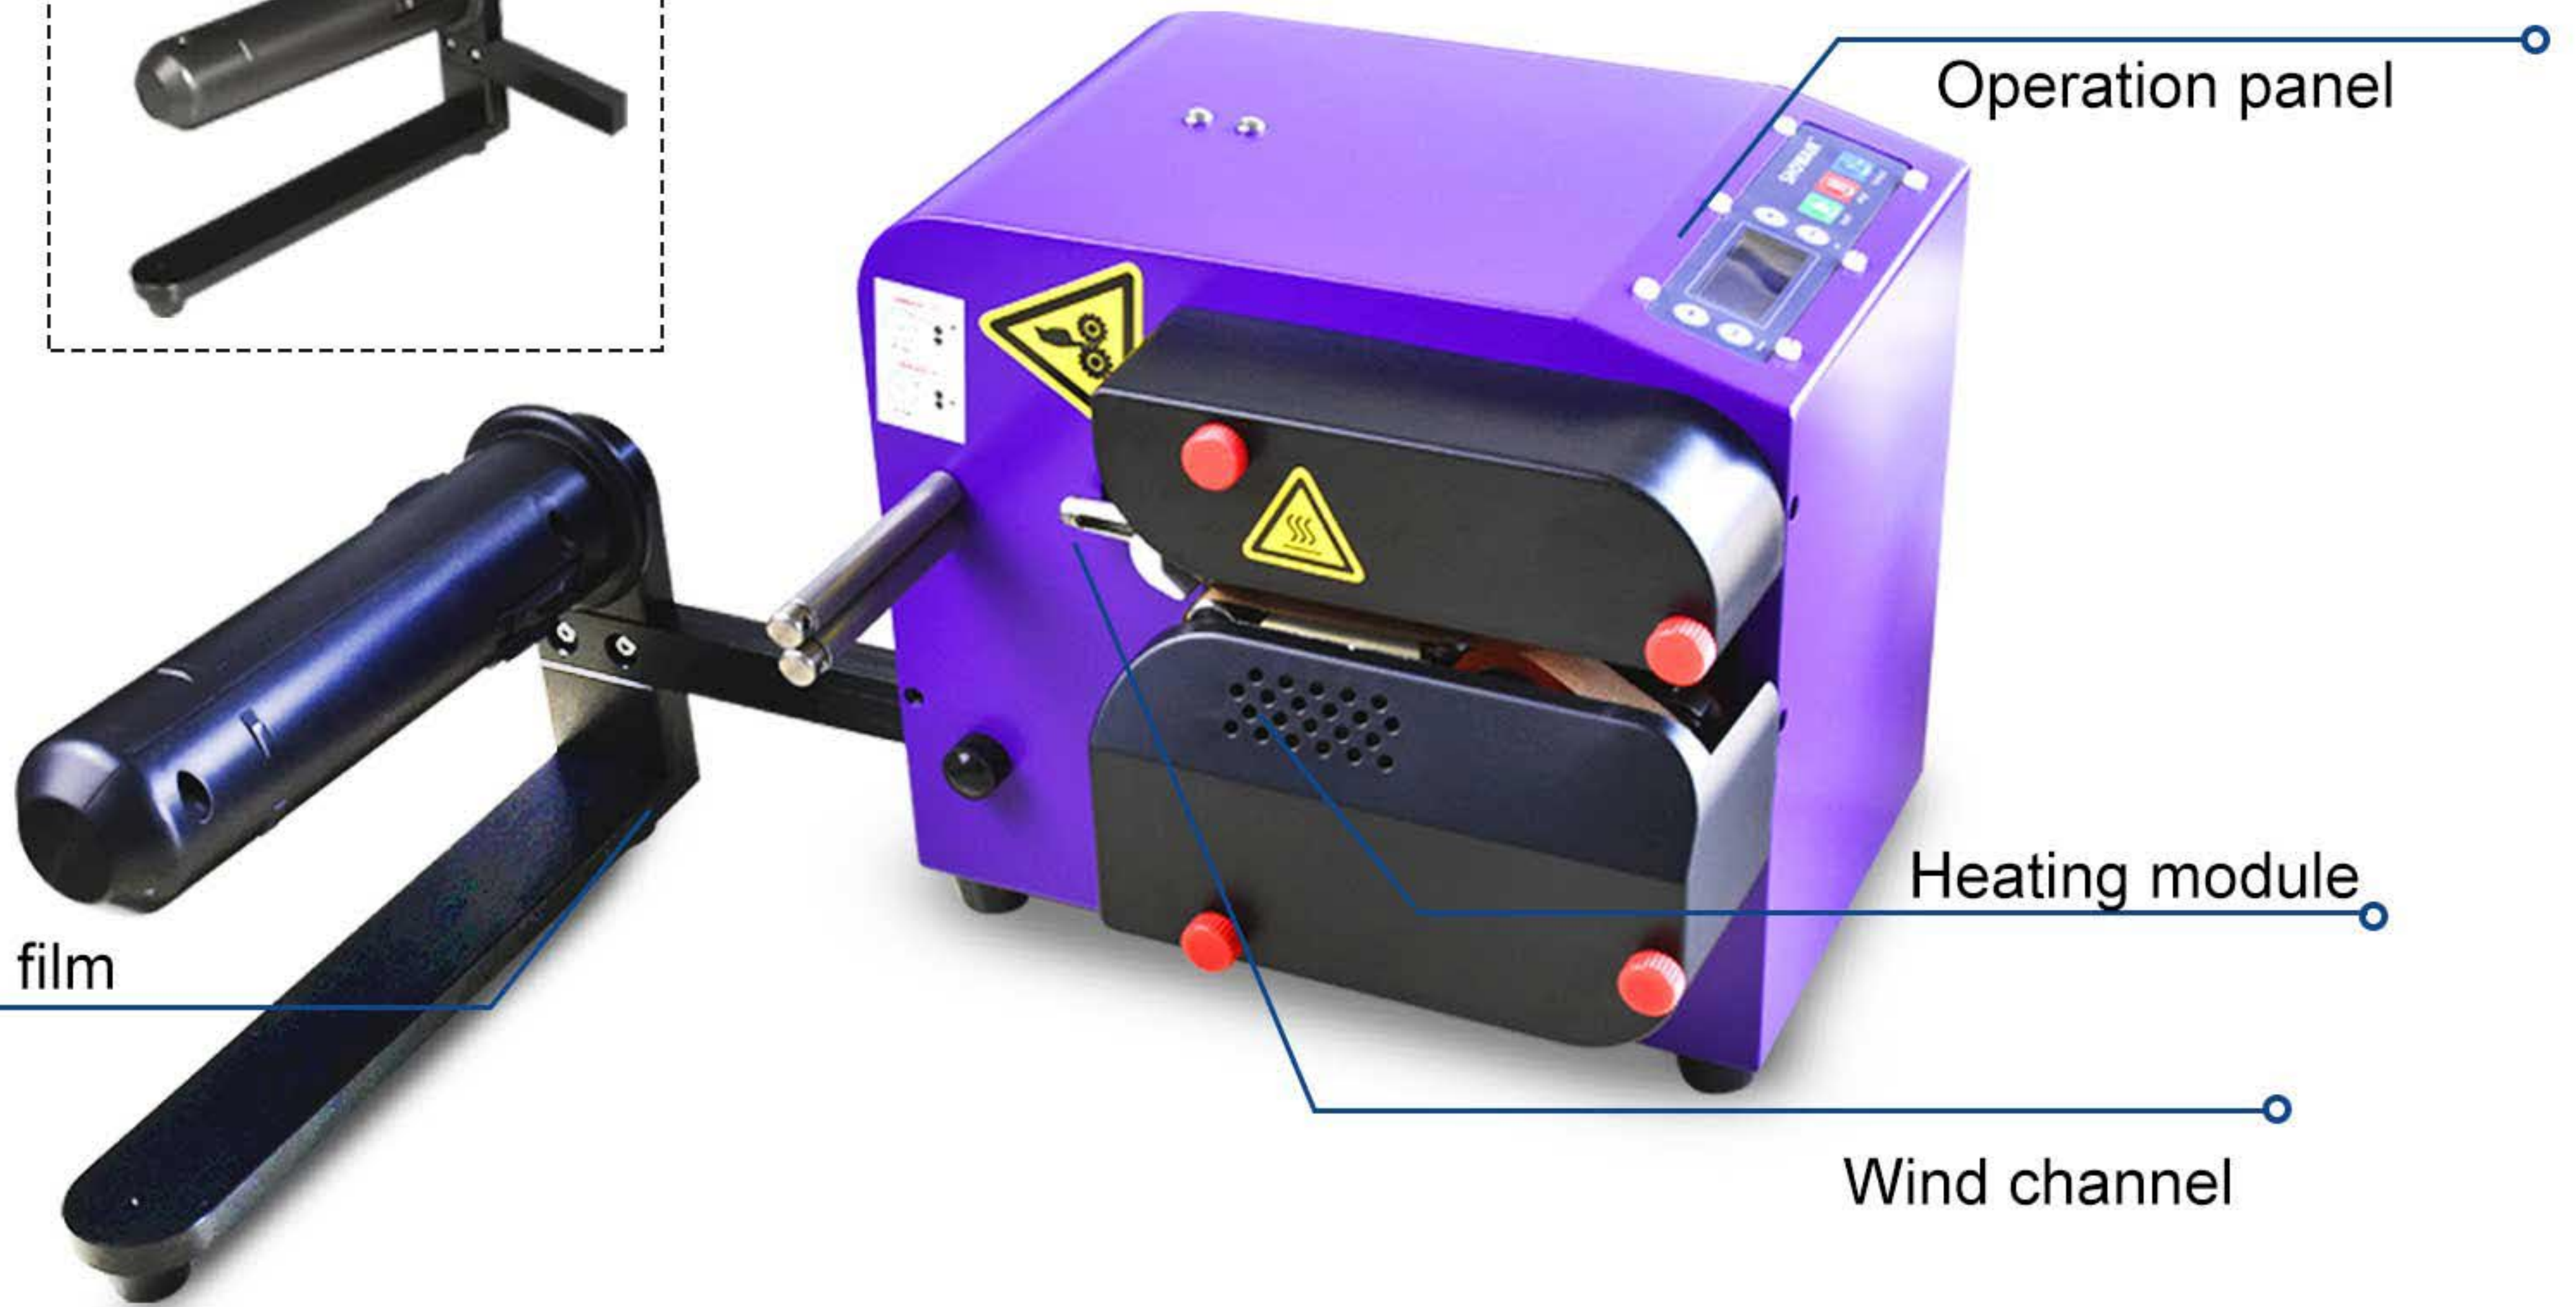

Operation panel

Heating module

Wind channel



## Operation process

1



Install fixtures



Insert power, turn on the switch



2



Place the roll,with the side of the tunnel facing inward



Open the roll wind tunnel and insert to the machine air tunnel

3



★ when the roll film is halfway through,press the enter film button and pull the roll film forward until the roll film passes through the wind tunnel completely



4



Set parameter,and press start button (see the following table for detailed setting parameters)



Scanning to watch the operating video



|           | Air cushion | Air bubble | Air column 3 row | Air column 5 row |
|-----------|-------------|------------|------------------|------------------|
| TEMP      | 160         | 180        | 180              | 180              |
| INFLATION | 45          | 80         | 80               | 80               |

Just make reference,can adjust as need

## » Attention

- » All contents of this project are related to safety. Please be sure to comply
  - » The attention items in this project are mainly for the correct use of this product. The attention items explain the danger, the extent of the harm, and the possible accidents
1. Before use, check whether the rated voltage of the product nameplate is consistent with the voltage of the voltage you use
  2. Please use grounded power to ensure personal safety
  3. Please do not touch the heating belt with your hand during use to avoid scalding.
  4. Children and incapacitated persons should use the product under the supervision of the guardian
  5. After unplugging, remember to turn off the switch button
  6. Please do not use other parts without the permission of the manufacturer, and the warranty will be terminated automatically if this causes machine failure

⚠ Warning: Failure to follow instructions can be dangerous

⚠ Attention: unauthorized operation may damage your goods and property.

## » Common problems

1. The machine cannot be started.

Problem resolution: check if the emergency button is on.

2. In the process of inflation, the film was blown out of the tunnel, so that the bag is stuck and cannot be inflated. A: the air volume is too large that the bag is blown off the side and out of the tunnel. B the speed is too slow that the air volume is too high and the bag blows out of the airway. The occurrence of this problem is generally caused by too much wind volume, as long as the wind volume and speed are well matched. C. Check whether the blade position is loose or damaged. If there is any damage, please replace the blade.

3. The machine stops automatically after blowing for a while.

Problem analysis: whether the machine has set the number of inflatable meters. Set MTR to 0. The purple machine has an automatic protection system, which stops when it reaches a certain temperature.

4. Air leakage after filling.

The mouth of the bag is not sealed. Check the temperature setting. The temperature setting is too low, turn the temperature up.

B the mouth of the bag is burnt out. Check the temperature parameters. The temperature is too high, turn it down.

C Check whether the belt is damaged. If damaged, please replace the belt.





## The warranty

1. Implement the 18-month warranty, the company will be responsible for the free warranty of products within the warranty period

2. The starting date of the warranty period shall be the invoice date of the product

3. Please show the warranty card when repairing

4. In one of the following cases, it is not within the scope of free maintenance

Failure due not following the instructions

Failure due to self - assembly and repair

Commercial display of samples, handling products, performance overload test products

 86-010-82395362

 sales@ashowair.com

 NO.1806,B building,JinMa Mansion,Xueqing Road,Haidian Distirct,Beijing,China,100083

 <http://www.showairpack.com>